

# REAL WORLD INTERFACES

## User Manual for the 32 Bank Memory System for the Devil Fish modified TB-303 (and the TR-606)

3 January 2010 [www.firstpr.com.au/rwi/dfish/](http://www.firstpr.com.au/rwi/dfish/)

© Robin Whittle 1996 – 2010. *TB-303* and *TR-606* are trade names of the Roland Corporation.



### Overall description

This is an additional modification I can install in a *Devil Fish* modified TB-303 or in a TR-606.

It provides 32 times the normal memory of the TB-303 or TR-606 – with the ability to switch from one bank to another *while* a pattern is playing. This enables changes to the notes played by the sequencer on a note-by-note basis, in contrast to the usual arrangement by which the sequencer finishes one pattern before starting the next.

In the discussion which follows, the term "bank" refers to the total memory of a TB-303:

- Four Pattern Groups (I, II, III, IV) each of 16 patterns, 1A - 8A, 1B - 8B.
- 7 Tracks (songs) numbered 1 to 7. (Actually 7 starting points in the long track memory.)

(In the TR-606, a "bank" of memory consists of 32 patterns and 8 tracks.)

The system selects between the 32 banks with the position of five toggleswitches. There are 32 combinations of these five switches being either up or down. Four of the switches are in a horizontal row. The fifth is below them, and is associated with a push-button switch which reverses its function. The purpose of the push-button switch is to provide a convenient instantaneous means of switching banks.

There is no labelling of the switches. Nor is there an particular numbering system for the banks. Using a binary number system, the banks could be numbered as follows.

'v' and '^' refer to down and up states of the five switches. For instance the photograph above shows the switches set for bank 4.

Switches	Bank number	Switches	Bank number
4 3210		4 3210	
v vvvv	0	^ vvvv	16
v vvv^	1	^ vvv^	17
v vv^v	2	^ vv^v	18
v vv^^	3	^ vv^^	19
v v^vv	4	^ v^vv	20
v v^v^	5	^ v^v^	21
v v^^v	6	^ v^^v	22
v v^^^	7	^ v^^^	23
v ^vvv	8	^ ^vvv	24
v ^vv^	9	^ ^vv^	25
v ^v^v	10	^ ^v^v	26
v ^v^^	11	^ ^v^^	27
v ^^vv	12	^ ^^vv	28
v ^^v^	13	^ ^^v^	29
v ^^^v	14	^ ^^^v	30
v ^^ ^^	15	^ ^^ ^^	31

For the fifth switch (labelled 4 in the table above), the state '^' is achieved with either:

- 1 - The toggleswitch up and the button not pressed.
- or
- 2 - The toggleswitch down and the button pressed.

### Use in Pattern Play Mode

If there is no need to switch banks while a pattern is playing, then operation is straightforward. Simply select the desired memory bank with the toggleswitches and use the machine normally.

Switching banks *while* the sequencer is playing patterns enables the creation in real-time of novel combinations of notes. For instance the first half of a pattern in bank 8 could be played, and then by moving the right switch to the up position, the rest of the notes in that bar of music will come from a pattern in bank 9.

Each pattern contains the following information:

- The **length** of the pattern in steps. This can be between 1 and 16, or 1 to 15 for triplet mode. After clearing the pattern, hold down the Function button and press the "Step" button "9" (the same as Transpose Down) once for each note you want in the pattern.
- The **"pre-scale"**, which is typically for 16 notes per 96 clock bar, but can be in triplet mode for 12 notes per 96 clock bar. After clearing the pattern, it is in 1/16th note mode, but by holding Function and pressing "0" the pattern is forever set to triplet mode.

- 16 **notes**, each of which contains:
  - Pitch.
  - Accent on/off.
  - Slide on/off.

(For the TR-606, each pattern has 16 beats, each of which can have each drum sound and accent programmed on or off.)

The sequencer is a single-chip CPU connected to what is normally a single bank of memory. With the 32 bank modification, there are actually 32 banks of memory, and the CPU accesses whichever one is currently selected by the toggleswitches. (The switches are de-bounced, so there are no messy transitions between banks due to mechanical bouncing of switch contacts.)

When the machine starts playing a pattern, the sequencer software (which is permanently built into the CPU) reads the length and pre-scale and stores these values in the CPU's internal RAM. When it comes to play each note (for the TR-606, each beat), the sequencer software causes the CPU to read the external memory to retrieve the note, accent and slide information for that note. (For the TR-606, the CPU reads which drums are to be triggered, and whether accent is to be set from external memory just before playing each beat.)

Therefore, by switching to another bank of memory in the middle of a pattern, the sequencer will play subsequent notes from the new memory bank. Switching will not change the note currently being played, but affects all subsequent notes.

Here is a concrete example for the TB-303. The memory switches are set to  $\hat{\quad} \vee\vee\hat{\quad}\vee$  which is Bank 18. The sequence is started playing Pattern 5B in Pattern Group III. Let's call this "Pattern III-5B". The sequencer plays this pattern several times and then in the middle of the pattern, while note 4 is playing, either the fifth toggleswitch ("4" in the above chart) is lowered, or the pushbutton is pressed. Either action has the same effect of making the fifth switch function as a "low". So the bank is now  $\vee \vee\vee\hat{\quad}\vee$  – Bank 2. As the CPU prepares to play the fifth note, it reads from memory, but instead of reading Note 5 of Bank 18's Pattern III-5B, it reads Note 5 of Bank 2's Pattern III-5B. So the pitch, accent and slide will vary as the banks are switched, but the CPU will take no notice of the lengths and pre-scales of any of the patterns it is playing.

Switch banks whilst in Pattern Write mode will surely lead to confusion of both the sequencer software and the user!

## **Use in Track Play Mode**

When I first began modifying TB-303s, TR-606s and TR-808s in 1981/82, it was to install multiple memory banks. The purpose was to store more patterns and tracks so the users could use the machines to accompany them on guitar, vocals, keyboards etc. Some of these musicians had repertoires of hundreds of songs. In those systems I used push-button switches, counters LEDs and/or 7 segment figure-8 LED displays to control and display the current bank number. The memory system was designed to reset the CPU whenever the bank was changed. Therefore changing from bank 23 to bank 13 was like turning off one drum-machine or TB-303 and turning on another. This was necessary, since there were certain items of data in the Track memory which was only read when the CPU ran its initialisation routines after being reset. (In the case of the TR-808, I made this reset circuit disableable to allow for live switching between banks in Pattern Play mode.)

Without this automatic reset circuit, there was a grave danger of the user changing banks whilst the CPU was running, and so causing it to become confused – particularly in regard to the starting and ending points of tracks and the prescales and lengths of patterns.

Now that the primary use of the TB-303 / *Devil Fish* (and the TR-606) is real-time manipulation rather than playing songs reliably, I have changed the memory control system. The new system has no automatic reset circuitry at all.

This toggleswitch and push-button arrangement is elegant, flexible and reliable. However, if you are using Track Play mode and you switch banks whilst the machine is turned on, then it is quite likely that the CPU's software will generate unexpected and undesirable results.

***If you are using Track Play Mode, do not change banks while the machine is turned on. If you accidentally do so, turn the machine off and on again so that the CPU reads in crucial data from the current bank.***

Unless you want to create unpredictable scrambles in the track memory, *never* change bank while you are in Track Write mode!

### **Data retention and other details**

This modification involves removing the existing memory chips and installing a much larger capacity memory system. Therefore it is *not* possible to retain the machine's memory data. Apart from a few test patterns I write into it, the modified machine will contain random data, so be sure to clear each track before you start writing.

I have observed the TB-303's sequencer do some strange things, apparently with errant data in the memory. I don't recall exactly what these things are, how to create the situation or how to resolve it. Such strange states of data in certain patterns cannot be ruled out in any TB-303, whether or not it has extra memory banks.

The current drawn by the memory system is still below 1uA, so all the statements in the Devil Fish User Manual about data retention, Lithium Battery voltage measurement and life, and clearing the memory apply to the new system.

The 32 bank memory system is covered by the same guarantee arrangements as the *Devil Fish* mods.

It is possible to create an 8 bank system as well, but it is almost as much work and so would cost only marginally less.

Note : I received reports from three users that the memory system may misbehave when the machine is running from batteries alone. I have not been able to reproduce this. The problem may be related to relatively high voltage fresh alkaline cells. Perhaps it would also be a problem running from a power supply while high voltage batteries are installed. Starting with Devil Fish serial number 081 (4 April 2000) I altered the battery supply arrangements for the 32 bank memory system to avoid potential problems when C-cell batteries are installed. This appears to have solved the problem.