


Gnd
NC
switch



To install an **Accent Pushbutton**, which, when pressed, causes every beat to be Accented, it suffices to install a normally closed switch, which goes open-circuit when pressed, in series with D12. This is **Mod B**, and we choose to do it at the anode end, since this is physically most convenient. The cut track is between the anode pads of D7 and D12. See photos above.

To avoid static electricity damage to the CPU, the metal body of the switch (I use a C&K 8125 SHZBE) should be grounded. I solder a wire to a lockwasher and connect it to a topside link wire just to the rear of D6, next to pin 8 of IC3, MC14001B = HD14001BP.

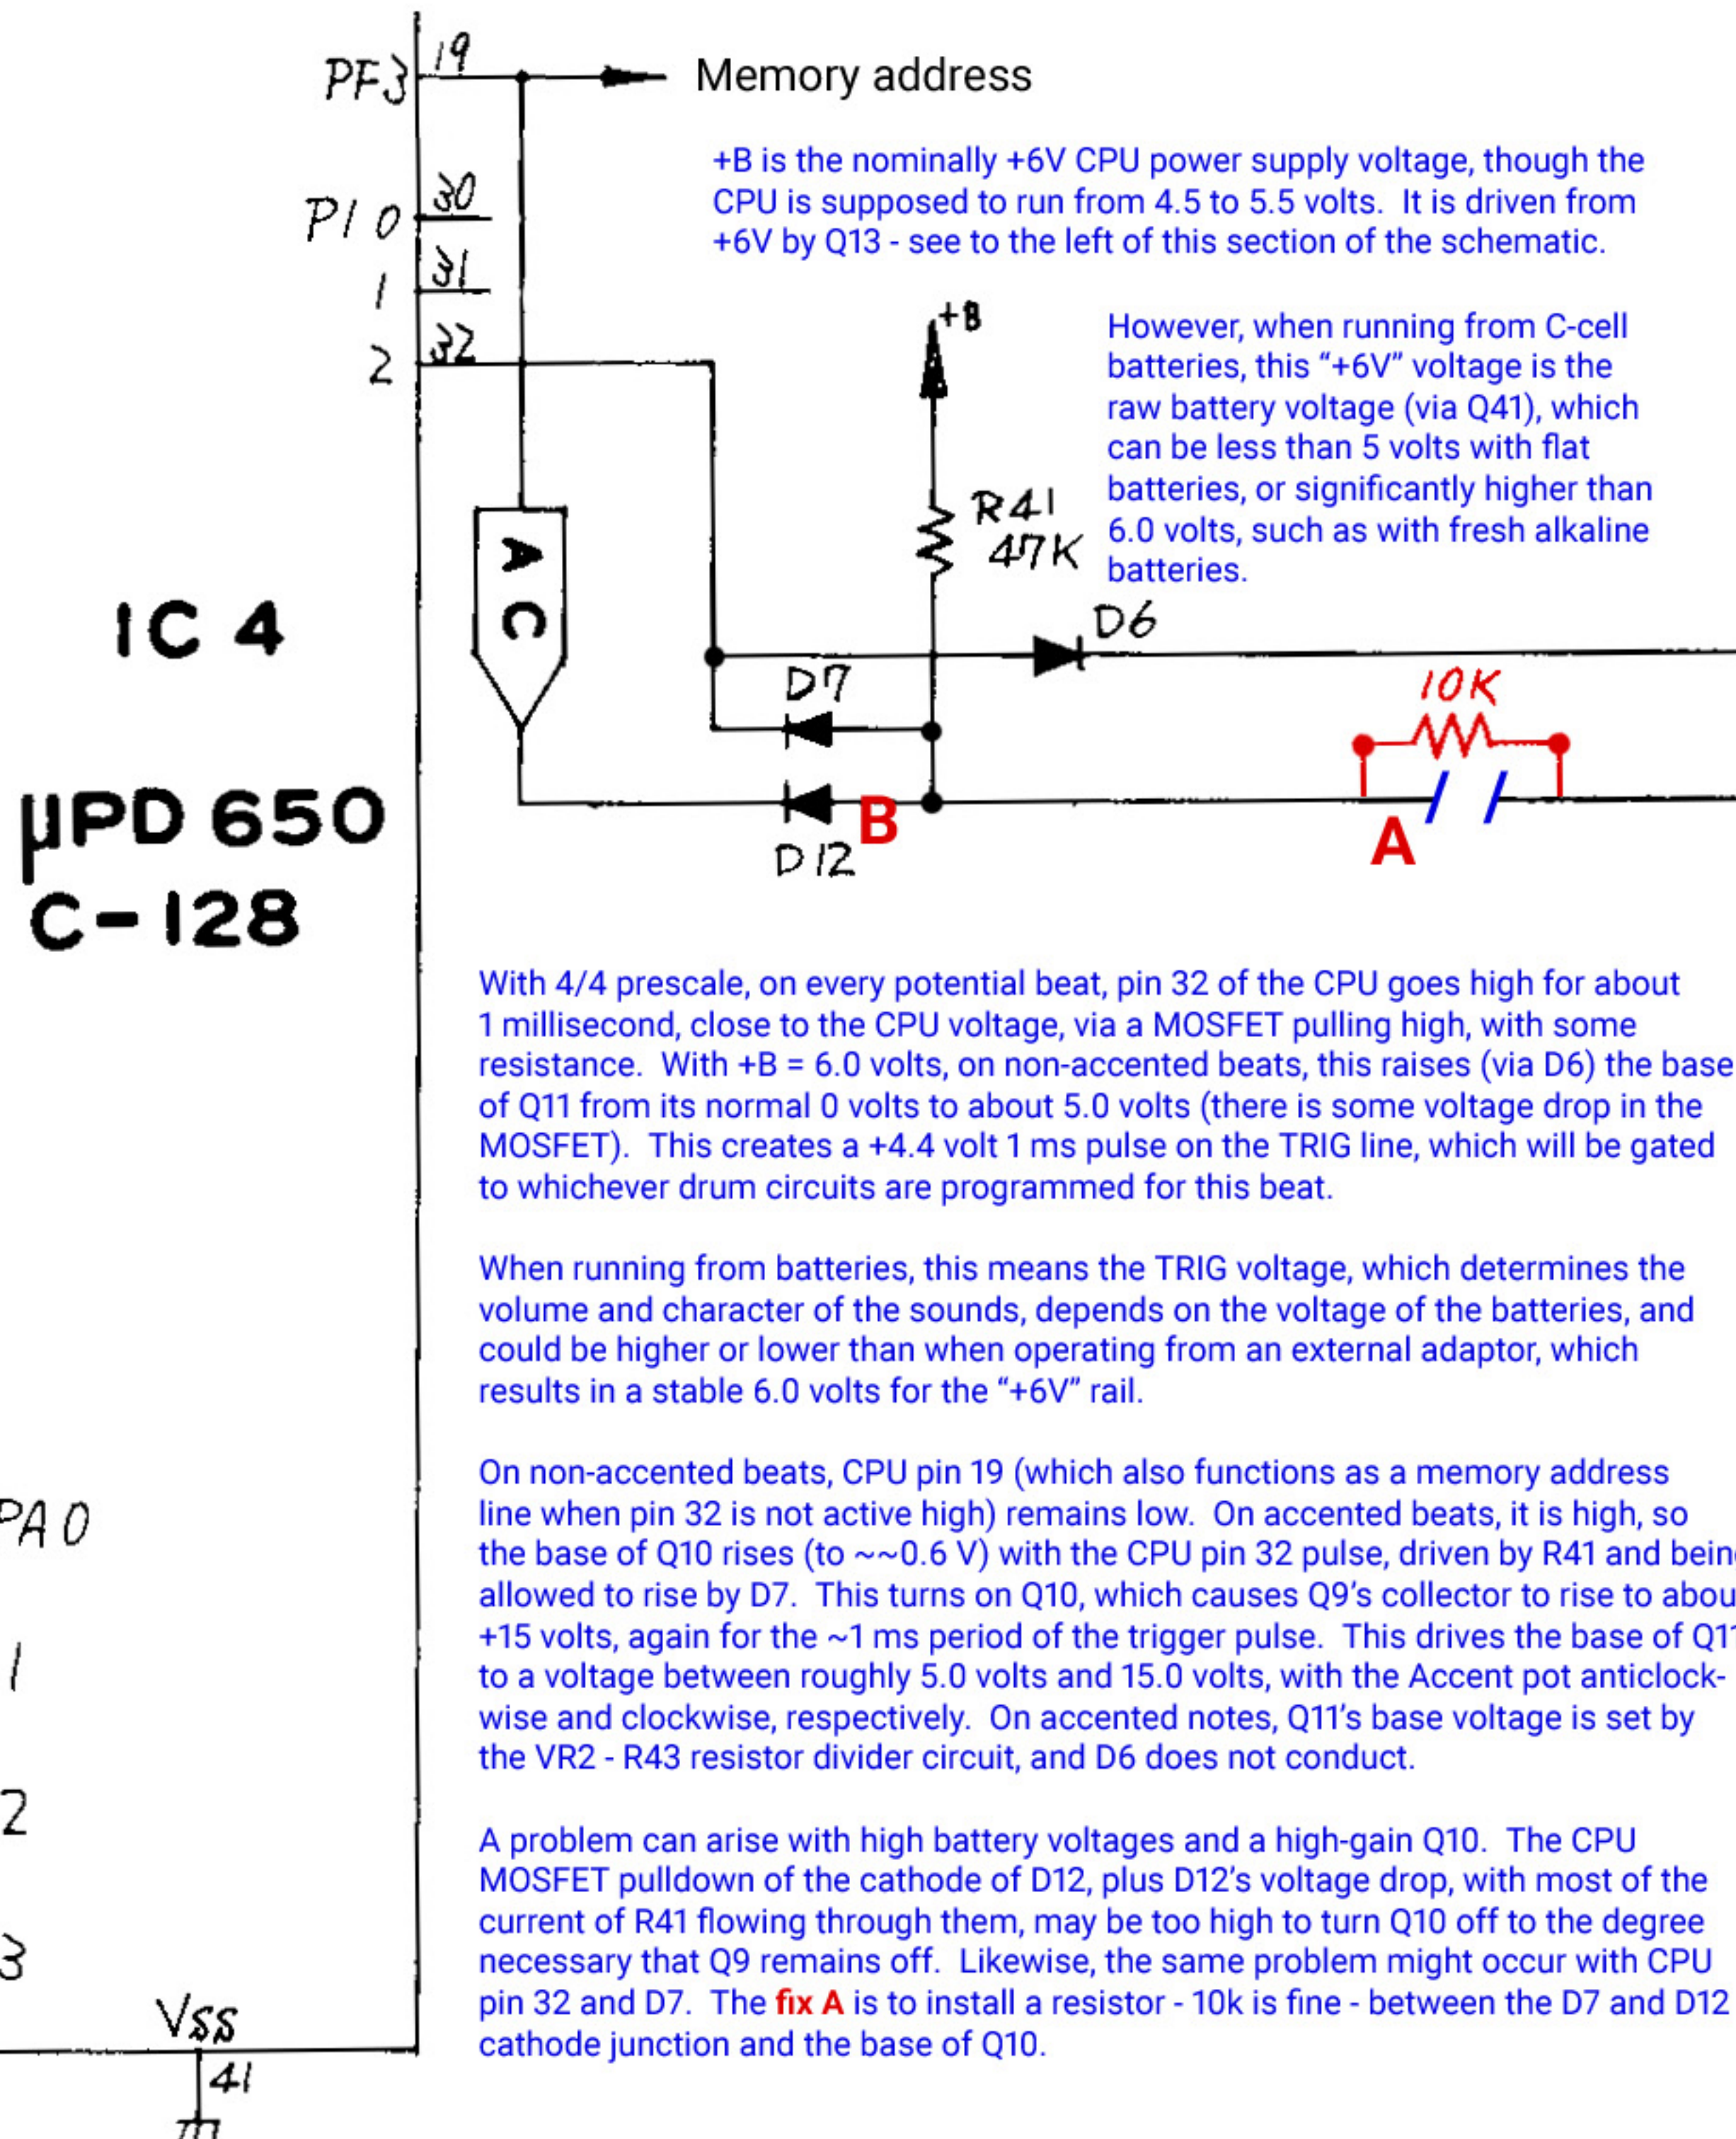